

IMPORTANT INFORMATION

For proper installation, A.B.Y.C. Standard H-27 (Sea Cock, Thru-Hull Connections, etc.) must be adhered to.

For proper protection, A.B.Y.C. Standards E-1 (Bonding of direct current systems) and E-2 (Cathodic protection) must be adhered to.

The above referenced standards can be obtained from:

American Boat & Yacht Council, Inc.
613 Third Street, Suite 10
Annapolis, MD 21403

MAINTENANCE:

Lubrication - Periodically lubricate handle stem with waterproof pump grease in order to reduce stiffness. Ball and seats are self-lubricating, however, inspect for deposits and foreign matter.

Winterizing - Sea Cocks have two drain plugs (in-Line valves have one) for draining water from the device prior to freezing conditions.

SPARE PARTS:

SPARE PARTS ORDERING INFORMATION

The Repair Kits Listed Below (**99B**) Consist of: 1 Ball, 2 Ball Seats and 2 O-Rings for the Valve Stem.
The Stem (**99C**) listed below consist of: 1 Stem, 1 Stem Nut and 2 O-Rings for the Valve Stem.

Size No.	Pipe to Hose Size Inches	For Figs. 0805, 0834 & 0835 Seacocks			For Figs. 0834 & 0835 Seacocks		
		Repair Kit Part No.	Stem Part No.	Handle Part No.	Thru-hull Connections N/Recom.	Straight Hose Adapters	90° Hose Adapters
4	1/2 to 5/8	080500599B	080500599C	080500599D	0322005PLB	0076004PLB	
5	3/4 to 3/4	080500699B	080500699C	080500699D	0322006PLB	0076005PLB	0063005PLB
6	1 to 1	080500799B	080500799C	080500799D	0322007PLB	0076006PLB	0063006PLB
7	1-1/4 to 1-1/4	080500899B	080500899C	080500899D	0322008PLB	0076007PLB	0063007PLB
8	1-1/2 to 1-1/2	080500999B	080500999C	080500999D	0322009PLB	0076008PLB	0063008PLB
9	2 to 2	080501099B	080501099C	080501099D	0322010PLB	0076009PLB	0063009PLB
10	2-1/2 to 2-1/2	080501199B	080501199C	080501199D	0322011PLB	0076010PLB	0063010PLB
11	3 to 3	080501199B	080501199C	080501199D	0322011PLB	0076011PLB	0063011PLB



Fig. 0805



Fig. 0834



Fig. 0835