

# **PERKO®**

## **Cat. No. 0372 Series L.E.D. Spreader Light**

The above lights are not designed for navigational use and are not for use below the waterline.

### **MOUNTING INFORMATION**

Read all instructions before proceeding.

- 1). These lights are supplied with the proper circuit for operation on a nominal 12 volt system.
- 2). These lights contain no user serviceable components.
- 3). Wiring should be done by a qualified marine electrician. Attach supply connections to the light, making sure to wire in accordance with both A.B.Y.C. Standard E-9\* and U.S. Coast Guard Safety Standards for Boat Electrical Systems (33CFR 183)\* Observe polarity.
- 4). The light may be mounted in any orientation that allows for maximum adjustability, on either a flat or round surface. When mounting on a round surface install the saddle between the bracket and mounting surface (see Diagram #1).
- 5). Attach the mounting bracket to the mounting surface using 1/4" Pan Head mounting screw (see Diagram #1).

\* The above referenced standards can be obtained from:

- |   |  |
|---|--|
| (1). American Boat & Yacht Council, Inc.<br>613 Third Street, Suite 10<br>Annapolis, MD 21403 | (2). U.S. Coast Guard<br>Washington, D.C. 20593<br>(or your local C.G. office) |
|---|--|

### **DIAGRAM 1**

