

# PERKO®

## Operating Instructions

Fig. Nos. 1324 Series Locking Caps  
0599 and 1399 Series Locking Fuel Fills

---

**Examine the Mounting Location** of the fill and consider the limitations of the key cylinder with regards to potential water intrusion -- DO NOT locate on a substantially submerged or flooded surface, otherwise moisture can be drawn into the system.

**To Unlock** - Insert key, hold tabs and turn key counterclockwise to engage threads, unscrew cap.

**To Lock** - Screw cap into fill, insert key, hold tabs and turn key clockwise, remove key.

**Note:** When cap is locked, top portion will spin freely.