

Installation and Operation Instructions
PLEASE READ ALL INSTRUCTIONS BEFORE PROCEEDING

These fills meet the new CARB and EPA requirements of U.S.C.G. Safety Standards (July 31, 2011) for 40 CFR Parts 9, 60, 80 et al. Control of Diurnal Emissions From Nonroad Spark-Ignition Engines and Equipment.

WARNING: Do not attempt to use these non-vented EPA caps and/or fill and cap assemblies on older vented non-EPA certified boats. Cap and fill body threads on these sealed non-vented EPA fills have been changed and are incompatible with older style vented fills.

Note: The vent line on the EPA fill functions only when the cap is removed and during the actual filling process. Inspect the fill components annually for signs of damage and wear. The system will not seal properly if o-ring in cap is cracked or worn. The caps for these fills have a vacuum over pressure relief valve (VOPR) that automatically relieves excess pressure in the tank due to expansion and contraction of fuel vapors.


1. Select mounting location:
 - In accordance with A.B.Y.C., U.S. Coast Guard and E.P.A. requirements and regulations.
 - Surface must be flat and provide adequate clearance to remove the cap.
 - Allow for adequate clearance under fill for routing fill and vent hose, which must be selected and installed in accordance with A.B.Y.C. requirements and U.S. Coast Guard Safety Standards for Small Boat Fuel Systems (33 CFR 183).
2. Attach mounting template to selected mounting surface and orient for desired position of fill/vent connections and for ease of insertion of the fuel nozzle into the fill neck. Drill where indicated. Be sure to drill the 3/4 inch hole before drilling the 2-1/16 inch hole.
NOTE: The 2-1/16" dimension of the larger hole is sized to provide mounting surface support to the fill body. DO NOT use larger size cutter or drill.
3. Mount fill using #8 pan head screws. Caulk if necessary.
4. Attach and clamp 1-1/2 inch fill hose and 5/8 inch vent hose in accordance with the above referenced standards.
5. Pull the tether and attachment ring out from the fill and snap onto the center of the cap into a groove that allows it to swivel.

NOTE: Plastic fuel fills should **NOT** be grounded.

- (1). American Boat & Yacht Council, Inc. 613 Third Street, Suite 10 Annapolis, MD 21403
(2). U.S. Coast Guard Washington, D.C. 20593 (or your local C.G. office)
(3). E.P.A. 401 "M" Street S.W. Washington, D.C. 20460

6/16
0660INS1

MOUNTING TEMPLATE

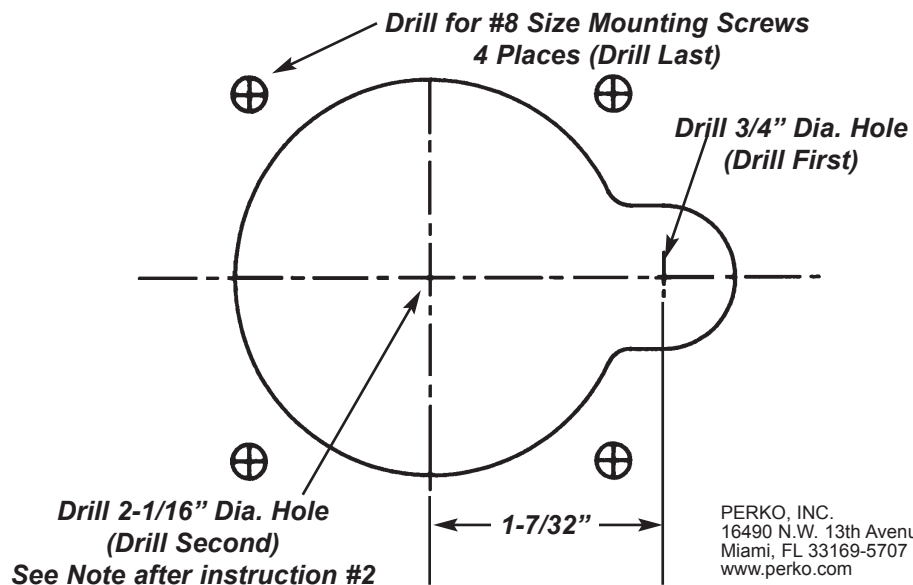

PERKO, INC.
16490 N.W. 13th Avenue
Miami, FL 33169-5707
www.perko.com

Instructions for Installing EPA Compliant Fuel Fills

Note: Perko's EPA style fills come with tethers attached to the fill body, but not to the cap. This eliminates the need to unscrew the tether before pressure testing a boat.

1. Fills are packed with caps installed. Tethers are fixed in the fill bodies but not attached to the cap.
2. Install the fill as indicated in the installation instructions #1 thru #4.
3. Once the pressure test is done, pull the tether and attachment ring out from the fill body and snap onto the cap by hand (see Diagram 1). The ring snaps over the ridge as indicated in Diagram 2.
4. Once attached, the ring allows the cap to turn freely without binding or twisting the tether. See Diagram 3.

Diagram 1

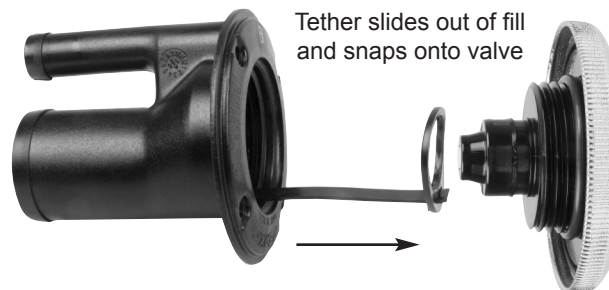


Diagram 2

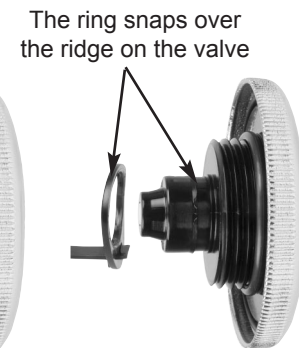


Diagram 3

